



1. Remove lock from mortice.
2. Place template in correct alignment, and mark hole centres accurately and drill holes required.
3. If required cut screws to required length, deburr end of cut screw. **Note: Do not cut with pliers or sidecutters as this is likely to cause thread damage upon assembly.**

Standard Tailbar

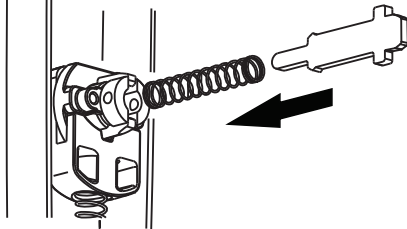


1. Insert spring and tailbar into end of turn knob as above. Push in tailbar until engaged and retained in turn knob. Refer below for correct tailbar for your door thickness.

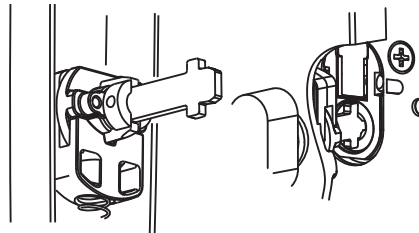


2. Engage tailbar end into the turn snib adapter as shown.

Emergency Tailbar

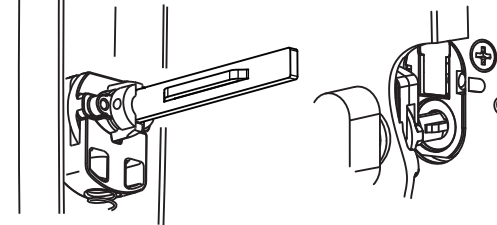


1. For Emergency Turns pass tailbar completely through the turn snib adapter.


Tailbar sizes
for Door Thickness
range



P/No. TAILBAR-S1



P/No. TAILBAR-S2



P/No. TAILBAR-E1

P/No. 1220-421 30621 0516

ASSA ABLOY

ASSA ABLOY Australia Pty Limited
235 Huntingdale Rd, Oakleigh, VIC 3166
ABN 90 086 451 907 ©2016

The Global Leader in Door Opening solutions