

# Aluminium Furniture with Mortice Lock

RW00-37\_30621-0516

### 1 PREPARATION OF MORTICE LOCK

- Attach adaptor plates to Lockwood mortice lock with screws provided.

### 2 DOOR PREPARATION

metal template available refer part no. RW99

- Mortice out door as per mortice lock instructions, **DO NOT** use mortice lock template to drill holes in door face
- Separate template from these instructions, align template with face plate recess in door edge and tape to door.
- Mark and drill face of door from both sides as indicated.

### 3 INSTALL LOCK

- Install turn adaptor if required before placing lock in mortice. Selector Adaptor is P/No. 3772-ADAPTOR Synergy Adaptor is P/No. SP3572-6250
- Insert cylinder pin (if required) before attaching cover plate.

### 4 ASSEMBLY OF MOUNTING STOCK

Ensure "TOP" is upward

- Screw short thread end of M4 shoulder studs into adaptor plate.
- Place mounting stock against door and secure using nuts, at this stage do not tighten.
- For doors 51 mm to 62 mm thick use acc pk RW00-42.


### 5 ASSEMBLY OF MOUNTING STOCK

- Ensure alignment by locating spindle through mounting stock and latch hub before tightening.
- Screw M4 x 20mm jacking grub screws into mounting stock. Adjust the jacking screws firmly against the adaptor (jacking screws prevent distortion of door face when nuts are tightened).
- Tighten nuts to secure assembly to the door.

### 6 ASSEMBLY OF LEVER

**NOTE:** use this template to ensure you are using this correct length spindle

- Attach lever assembly and secure with M4 x 10mm countersunk screw.
- Ensure lever operates smoothly.

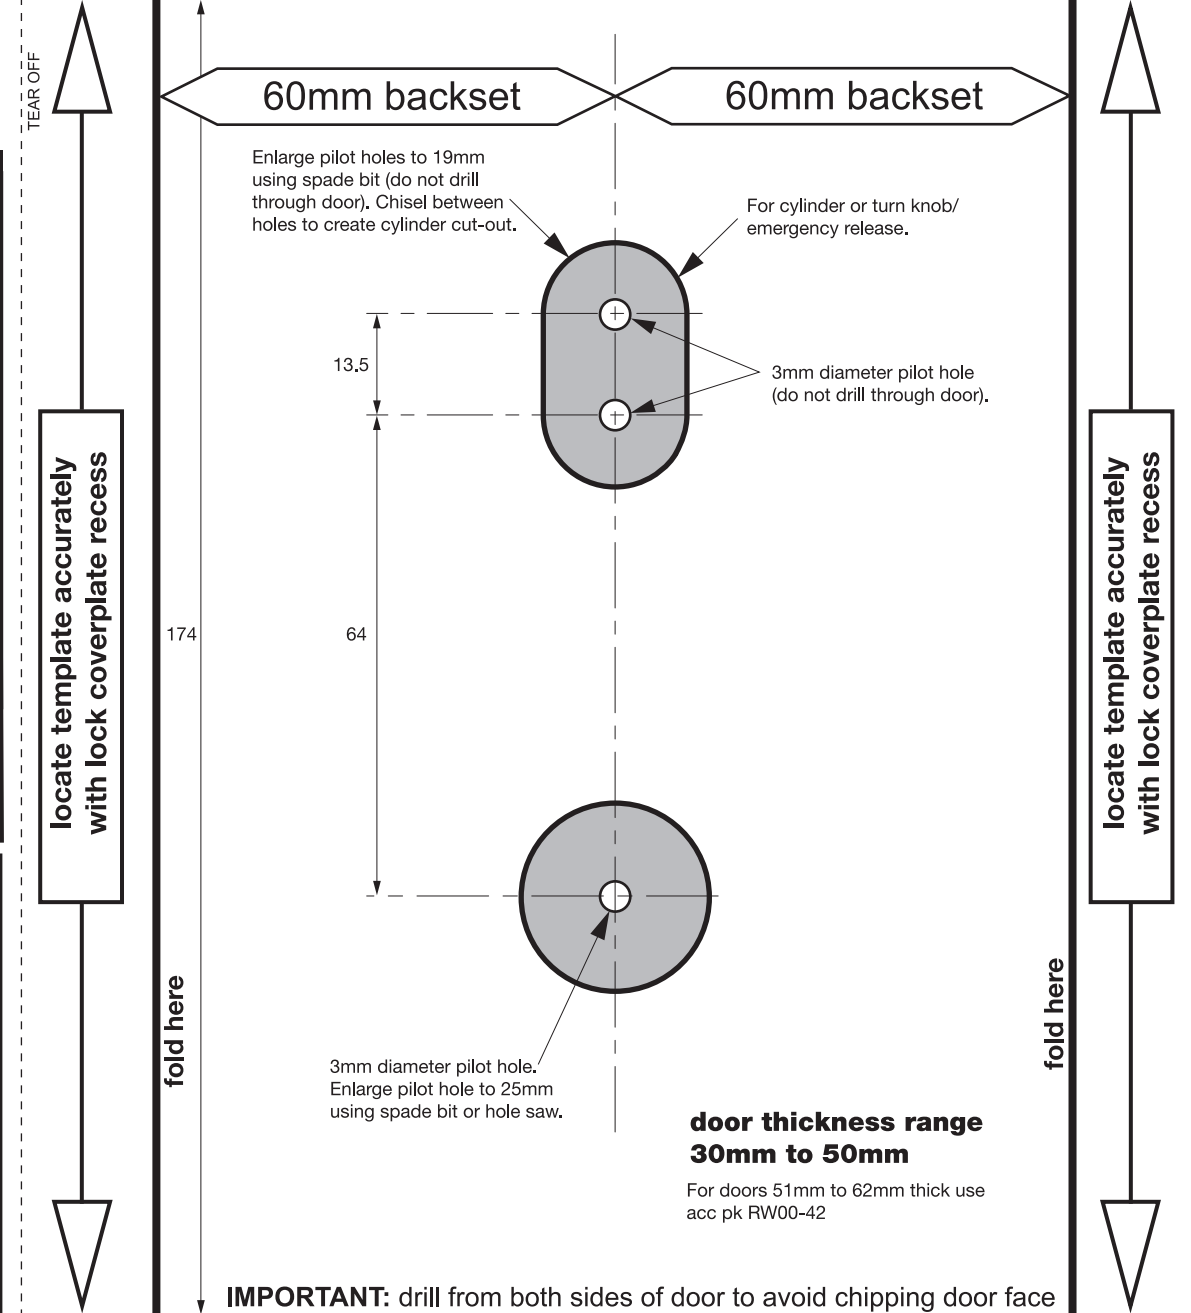

- TOOLS REQUIRED**
- Ø3.0mm Drill bit
  - Ø4.0mm Drill bit
  - Ø19mm Spade bit
  - Ø25mm Spade bit
  - Electric drill
  - Chisel
  - Hammer
  - Phillips head screwdriver
  - Hex. socket for nuts
  - Pencil
  - Ruler / measuring tape

### TURN KNOB AND EMERGENCY RELEASE KITS

**turn knob RW07**  
(for use with cylinder outside)

**indicator turn knob RW08**  
(for use with cylinder outside)

**turn knob & emergency release RW09**

Turn Knob should be installed vertically upwards for UNLOCKED position as shown.

Emergency Release should also be installed with slot vertical for UNLOCKED position. INDICATOR SHOWS GREEN.

**turn knob & indicator emergency release RW10**

**indicator turn knob & indicator emergency release RW11**

door thickness	escutcheon thickness "T"				
	17	14	11	8	5
30-38mm					
39-44mm					
45-50mm					
51-56mm					
57-62mm					