

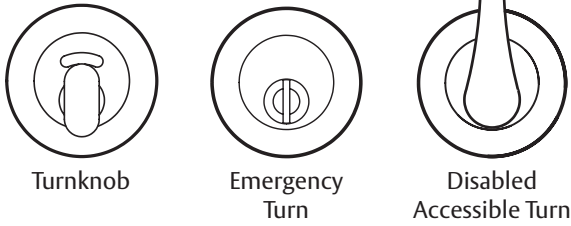


Turn escutcheon examples:

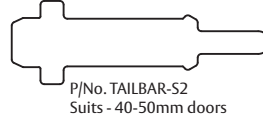


Tailbars for different turn escutcheon combinations:

Single side turn escutcheon only

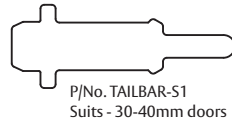

Privacy configuration  
(Turn escutcheon both sides)

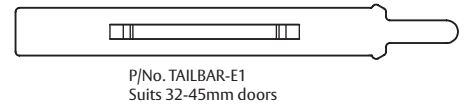

## 1 Configuring disabled accessible turn escutcheon

If mounting a disabled accessible turn, the escutcheon will need to be configured according to the mortice lock in use.

1. Refer to the images below to identify the mortice lock in use.
2. Remove the screws according to the turn setting required.  
Selector configurations should allow 45° rotation, Synergy configurations should rotate to 90°. Use images below as a guide.

### A 3770 SELECTOR SETTING AND HANDING

SET FOR LEFT HAND 3770

SET FOR RIGHT HAND 3770

SCREW REQUIRED TO SET HANDING  
SCREW REQUIRED TO SET FOR 3770 SELECTOR

#### SELECTOR MORTICE LOCK

Stainless steel plate  
Narrow auxiliary bolt  
'3770 Series'

### B 3570 SYNERGY SETTING AND HANDING


SET FOR LEFT HAND 3570

SET FOR RIGHT HAND 3570

ONE SCREW REQUIRED TO SET HANDING


#### SYNERGY MORTICE LOCK

Wide auxiliary bolt  
'3570 Series'  
Plain case

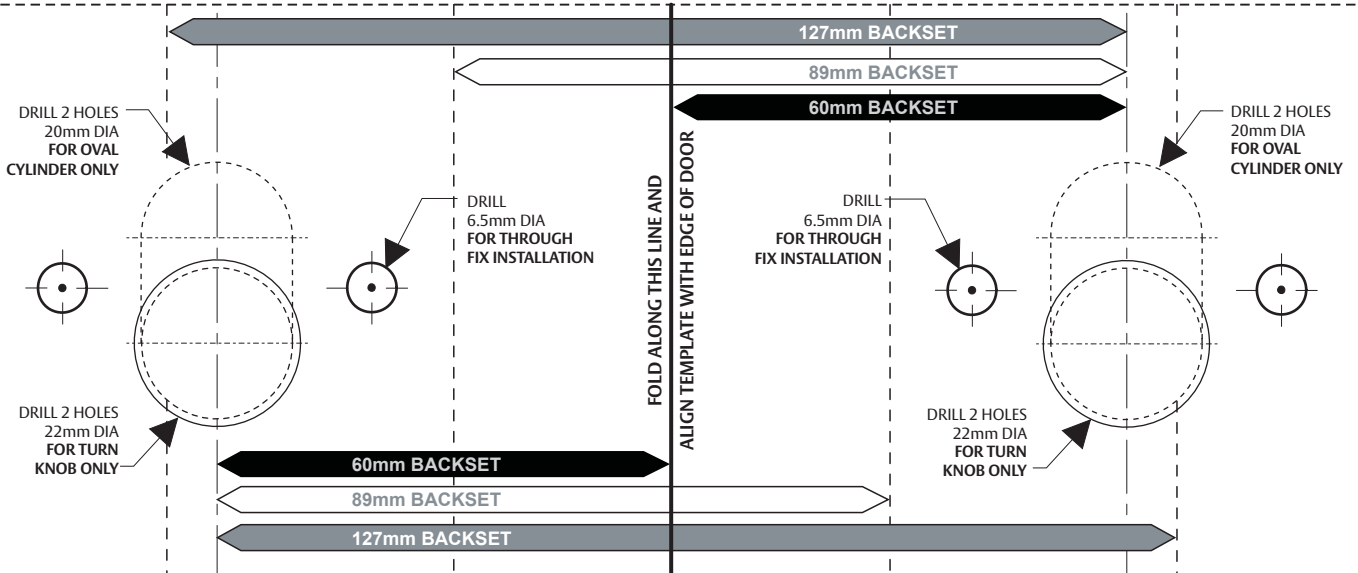

## 2 Door preparation



1. Cut out the template from the bottom of the sheet.
2. Remove lock from mortise and place the template in the correct alignment according to the required backset.
3. Mark hole centres accurately and drill holes required.
4. For through fixing, cut screws to length. Deburr end of cut screws.  
Note: Do not cut screws with pliers or side cutters as this is likely to cause thread damage upon assembly.

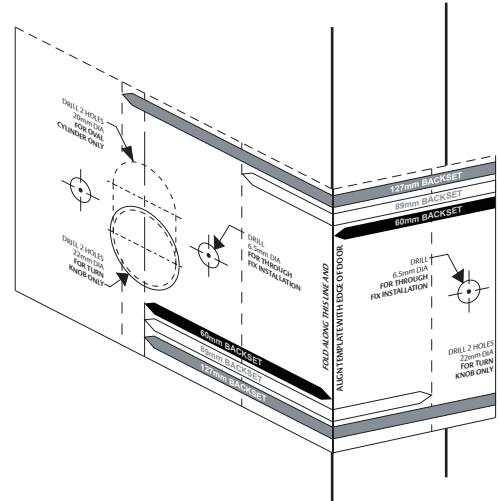

## 3 Mounting instructions

Use the appropriate tailbar according to escutcheon combination being installed.  
Follow instructions below for mounting each type of turn combination.




For single side turn escutcheon

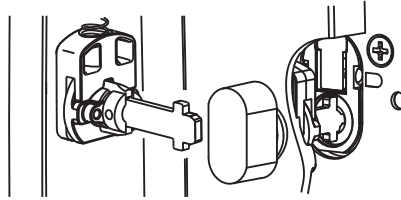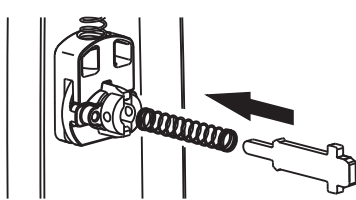

1. Insert spring and tailbar into end of turn knob as above. Push tailbar until engaged and retained in turn knob. Refer above for correct tailbar for your door thickness.

2. Engage tailbar end into turn snib adapter as shown.

For privacy configuration (Turn escutcheon both sides)

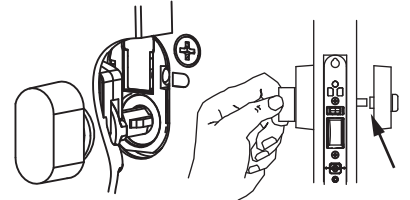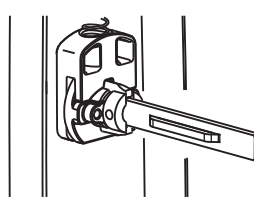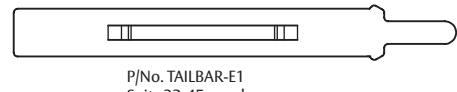

1. Insert spring and narrow end of tailbar into turnknob or disabled accessible turn until engaged and retained.

2. Pass tailbar completely through the turn snib adapter as shown.
3. Make sure tailbar engages with the turn escutcheon on the other side of the lock.